



MIRKA

Net Pad Saver Disc

The Pad Saver Disc enables smooth and stable net sanding. The pad saver disc prevents the backing pad from rapid wear out.

We recommend replacing the pad saver disc when the grip attachment of the net sanding disc becomes weak.

Application instruction:

- Match the pad saver disc hole pattern to the backing pad by locating the matching holes on the disc to the locating spots on the backing pad.
- Apply and press the disc firmly to the backing pad. Fasten the net sanding disc to the pad saver disc.
- Place the sander on the object to be sanded and then start the sanding machine.

Quality from start to finish



MIRKA

Net Pad Saver Disc

